


WARNINGS AND CAUTIONS:

Duplex Receptacle (Top Controlled) **Scene Capable Receptacle**

Cat. No. DZR15 - 15A - 125VAC. 60Hz

Incandescent-1800W - Magnetic Low-Voltage-1800VA (1440W) Electronic Low-Voltage-1800W - Fluorescent-1800VA - Supplemental-1/2 HP

INSTALLATION INSTRUCTIONS

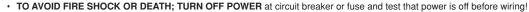

- To be installed and/or used in accordance with electrical codes and regulations.
- If you are unsure about any part of these instructions, consult an electrician.
- To ensure that there is adequate room for wires, we recommend using at a minimum 3-1/2 inch deep wallboxes. For single-gang applications, this would be at a minimum an 18-cubic inch wallbox

WARNINGS AND CAUTIONS:

- · Disconnect power at circuit breaker or fuse when servicing, installing or removing fixture.
- Maximum wire length cannot exceed 300 ft (90 m).
- · Use this device with copper or copper clad wire only.
- Not for use with Vizia RF® lighting systems.

DI-000-DZR15-02A

INTRODUCTION

Leviton's Decora® Z-Wave® control components are designed to communicate with each other via Radio Frequency (RF) to provide remote control of your lighting. In a Z-Wave® network, each device is designed to act as a router. These routers will re-transmit the RF signal from one device to another until the intended device is reached. This ensures that the signal is received by its intended device by routing the signal around obstacles and radio dead spots. The Scene Capable Electronic Receptacle is compatible with most Z-Wave® enabled networks, from different manufacturers and can also be used with other devices displaying the Z-Wave® logo.

WARNING: TO AVOID FIRE, PERSONAL INJURY OR DEATH DO NOT

USE the remote for the control of high power heating appliances such as portable heaters. Remember to exercise good common sense when using the Timer features of your Remote – especially when scheduling unattended devices. There can be some unexpected consequences if not used with care. For example, an empty coffee pot can be remotely turned on. If that should happen, your coffee pot could be damaged from overheating. If an electric heater is turned on by remote control while clothing is draped over it, a fire could result. DO NOT USE the remote for the control of high power heating appliances such as portable heaters.

TOOLS NEEDED TO INSTALL YOUR RECEPTACLE

Electrical Tape

Cutters

Pliers

Ruler

FEATURES

- · Receptacle ON/OFF
- Scene Capable
- ON/OFF LED
- · Two way communication

Slotted/Phillips Screwdriver

RF reliability


Pencil

- Ease of installation No new wiring
- · Compatible with other Z-Wave® enabled devices

Changing the color of your Receptacle:

Your Receptacle includes three color options. The Receptacle ships with the White frame attached. To change color of frame, proceed as follows:



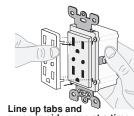

press in sides one at a time

to attach

INSTALLING YOUR RECEPTACLE

NOTE: Use check boxes $\sqrt{}$ when Steps are completed.




WARNING: TO AVOID FIRE SHOCK OR DEATH; TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring!





Identifying your wiring application (most common):


NOTE: If the wiring in your wall box does not resemble any of these configurations, consult a qualified electrician.

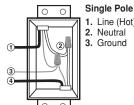

1. Line (Hot) 2. Neutral 3. Ground

Preparing and connecting wires: Step 3

This receptacle can be wired using side wire terminal screws or through backwire openings. Choose appropriate wire stripping specifications accordingly.

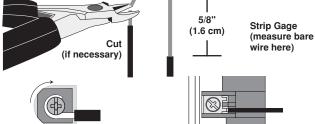


Side Wire Connection Side wire terminals accept #14-12 AWG solid copper wire only.

Back Wire (either hole may be used) Back wire openings accept #14-12 AWG solid copper wire only.

- · Make sure that the ends of the wires from the wall box are straight (cut if necessary).
- · Remove insulation from each wire in the wall box as shown.

Single Pole Wiring Application:

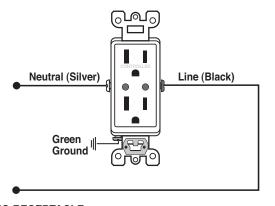


WIRING RECEPTACLE:

Connect wires per WIRING DIAGRAM as follows:

- Green or bare copper wire in wall box to Green terminal screw.
- Line Hot wall box wire to terminal screw marked "LINE".
- · Line Neutral wall box wire to terminal screw marked "NEUTRAL".
- · Proceed to Step 5.



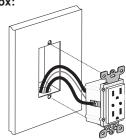

- Position all wires to provide room in outlet wall box for device.
- · Partially screw in mounting screws in wall box mounting holes. **NOTE:** Dress wires with a bend as shown in diagram in order to relieve stress when mounting device.
- · Restore power at circuit breaker or fuse.
- · Locator light should turn ON.

If locator light does not turn ON, refer to the TROUBLESHOOTING section.

Receptacle Mounting: TURN OFF POWER AT CIRCUIT BREAKER OR FUSE.



Installation may now be completed by tightening mounting screws into wall box. Attach wallplate.

Step 7

Restore Power:

Restore power at circuit breaker or fuse. Installation is complete.

NOTE: To include your dimmer into a network, contact Leviton's Techline at 1-800-824-3005 or visit Leviton's website at www.leviton.com




FACTORY DEFAULT

If your receptacle is not responding, or you are unable to control it after you have tried to Include/Exclude it multiple times, it may be necessary to reset the receptacle to its original factory settings. To accomplish this, proceed as follows:

 On the receptacle, press and hold the program button until the locator LED turns Amber and then flashes Red. The receptacle is now reset.
Once the receptacle is reset, it will be necessary to Re-Include it to a network before it can be used.

CAUTION: SETTING A DEVICE TO A FACTORY DEFAULT DOES NOT EXCLUDE THAT DEVICE FROM A NETWORK. THE EXCLUSION PROCEDURE MUST STILL BE FOLLOWED TO REMOVE THE DEVICE FROM THE PRIMARY CONTROLLER'S INFORMATION TABLE. FAILURE TO DO SO MAY RESULT IN SYSTEM THAT IS SLOW TO RESPOND, OR MAY FAIL TO RESPOND TO SOME DEVICES.

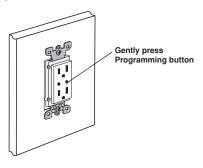


OPERATION

NOTE: The locator light will illuminate when receptacle is connected.

If there is a power outage, when the power is restored, the lights will return to the last setting before the power interruption.

Cleaning: Clean with a damp cloth. DO NOT use chemical cleaners.

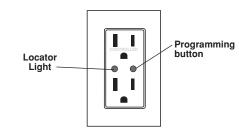

TROUBLESHOOTING

- · Receptacle has no power
- Receptacle has a bad connection.
- Wires not secured firmly under terminal screws of receptacle
- · Locator LED does not turn ON
- Circuit breaker or fuse has tripped.
- Neutral connection is not wired.
- Press progarmming button.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving Antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/tv technician for help.

FCC CAUTION

Any changes or modifications not expressly approved by Leviton Manufacturing Co., Inc., could void the user's authority to operate the equipment.

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada Ltd to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1-800-405-5320.

For additional information, contact Leviton's Techline at 1-800-824-3005 or visit Leviton's website at www.leviton.com

Covered by U.S. Pat. Nos.: 7,756,556; 7,938,676; 8,105,094 and corresponding foreign equivalents.

Licensed under U.S. Pat. Nos. 5,905,442, and 5,982,103

Z-Wave is a registered trademark of Sigma Designs Inc and/or its subsidiaries

© 2014 Leviton Mfg. Co., Inc.

DI-000-DZR15-02A

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option. For details visit www.leviton.com or call 1-800-824-3005. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. There are no other or implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty is required by the applicable jurisdiction, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation. The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.