



Instructions for Use - Opt-X® SDX Wallmount Enclosures

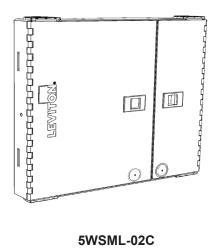

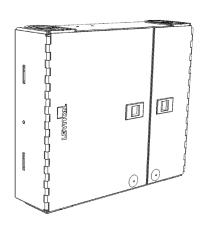

5WMED-04C

PK-A3188-10-00-0B Page 1 of 11



FIBER CONNECTOR SAFETY WARNINGS

SAFETY INFORMATION

- Always wear safety glasses.
- Isopropyl alcohol is flammable and may cause eye irritation. In case of contact with eyes, flush with water for at least 15 minutes. When using isopropyl alcohol, always assure proper levels of ventilation. In case of ingestion, consult a physician immediately.
- Never look directly into a laser light source, point source at a person's eyes, or point source at reflective surfaces.
- When working on a fiber link, always turn laser source off, or disconnect completely.
- Always dispose of fiber debris properly, preferably using sticky tabs.
- Do not place food or beverages in the vicinity of the work area.
- · Thoroughly wash face and hands after terminating fiber.
- Carefully remove any fiber debris that may have been stuck to clothing, or left in work area, and dispose of properly.

TIPS AND RECOMMENDATIONS

- Using isopropyl alcohol, thoroughly clean exposed fiber and buffer ensuring both are free from dust, oil, and debris.
- Do not lay ferrule dust covers on a dirty or dusty surface.
- Always use proper tools and/or accessories to terminate fibers and clean connector tips.

QUICK START GUIDE

The following instructions will help you quickly install your Leviton Opt-X® Wallmount Enclosure for use in your equipment cabinet or rack. For detailed information on each step, go to the page number listed below.


Safety Instructions	Pg. 2
Quick Start Guide	Pg. 2
Equipment Guide	Pg. 3
Standard Accessories	Pg. 4
Optional Accessories	Pg. 4
Required Hardware and Tools	Pg. 4
Configurations	Pg. 5
Adapter Plates	
 Splicing 	
SDX Cassette	
Mounting	Pg. 5
Grommet Preparation and Use	Pg. 5
Cable Installation Applications	
Adapter Plates	Pg. 7
SDX Cassette	Pg. 7
 Splicing 	Pg. 8
Grounding armored cabling	
Installing the optional lock kit	Pg. 10
Labeling	Pg. 11

Page 2 of 11 PK-A3188-10-00-0B




EQUIPMENT OVERVIEW - SMALL/MEDIUM, LARGE

Small/Medium Enclosure

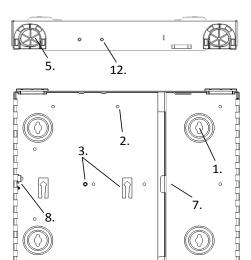



- 2. Wire management saddle mounting holes
- 3. Splice tray mounting point
- 4. Door latch
- **5.** Cable entrance grommet
- 6. Cable lacing point
- 7. SDX Bulkhead
- 8. Grounding Stud
- 9. Service Door
- 10. Patch Door
- 11. Optional lock knockout blank
- 12. Optional Cable Clamp mounting point

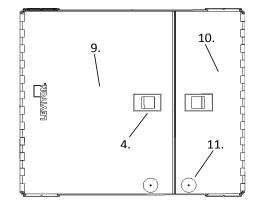

Pour les traductions en français, allez à: Para las traducciones en español, visite: www.leviton.com

PK-A3188-10-00-0B Page 3 of 11



STANDARD ACCESSORIES

Description	Image	Quantity in Sm Kit	Quantity in Med Kit
Port Identification Label	LENTING COM TRUSSERVEN BEDEFLANS LEVITOR STRENGE	1	1
Wire Management Saddles		7 Small	7 Medium
Velcro 5"		2	2
Grommets		4	4
#10 Wood Screw		4	4
Grounding Lug		1	1
Blank Adapter Plate		1	2

OPTIONAL ACCESORIES

Lock and Key
Universal Clamp Kit (single)
Universal Clamp Kit (multi)
SDX to HDX adapter bracket
Splice Trays
Splice Tray Mounting Hardware Kit

5L000-KAL 5RCMP-KIT 5RCMP-KT2 HDXAD-ACC (See splice tray configurator) SPLMT-HKT

REQUIRED HARDWARE AND TOOLS

Mounting screws/lag bolts, wall anchors, washers as appropriate Small Magnetic Torpedo level Powered drill or screw driver Scissors or safety blade utility knife

PK-A3188-10-00-0B Page 4 of 11



Page 5 of 11

CONFIGURATIONS

There are four possible configurations using the small and medium enclosures.

- 1) Field or pre-terminated cabling used with SDX adapter plates
- 2) Pigtail splicing used with SDX adapter plates
- 3) Pigtail splicing used with Splice modules
- 4) Use with pre-terminated MTP cabling and SDX cassettes or SDX to HDX adapter brackets

See the Installation section for diagrams of each configuration.

MOUNTING INSTRUCTIONS

- 1) Determine the location to mount the enclosure. Use the following considerations in selecting a mounting location:
 - a) Appropriate mounting base per applicable codes and Authority Having Jurisdiction (AHJ)
 - b) Space around the enclosure to open the door and route patch cables.
 - c) Adequate space above or below the enclosure to maintain industry standard bend radius compliance of all cables entering the enclosure.
- 2) If using the large enclosure in the splice only configuration, install the splice tray hardware before mounting the enclosure.
- 3) Using a level, place the enclosure at the target mounting location and mark the four mounting hole positions.
- 4) Install the top two screws and verify the enclosure is level during final tightening of screws.
- 5) Install the bottom two screws.

GROMMET PREPARATION AND USE

Cable Grommets are provided and designed for use at both trunk and patch cord entrance points to the enclosure.

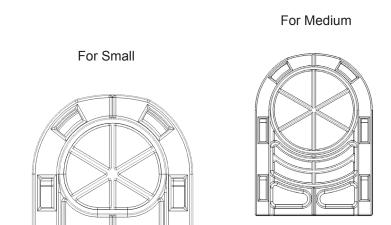



Figure 1

There are several options in configuring the grommets. When patching, it is recommended to cut a channel at the front of the grommet to easily install patch cords. When routing trunks it may be desired to cut a channel at the rear of the grommet to allow for grommet removal for adding additional trunk cables. Grommet pass through material can either be slit to limit dust and water egress or removed entirely. To configure a grommet, use the following cutting methods:

- 1) Determine required opening in cable entrance grommet
- 2) Determine whether slitting or removing material will be performed
- 3) Using a sharp-edged tool, cut the appropriate opening in using the scored marking lines as shown in figures 2 and 3:
- 4) Optional cut a channel through the outer wall of the grommet for either trunk or patch cord routing.

PK-A3188-10-00-0B



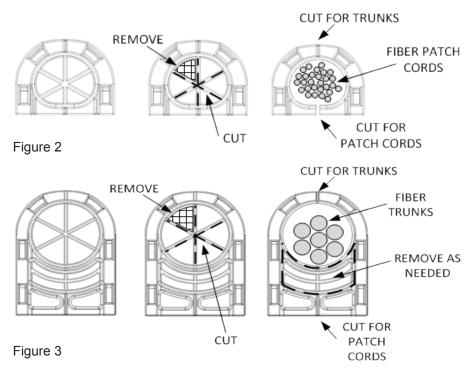

Estimated Fill Ratios

Cable Description (based on 50% fill)	Diameter in inches	Diameter in MM	Qty per Small Grommet	Qty per Medium Grommet
Micro Data Center 12s Plenum	0.16	4.06	15	26
Micro Data Center 24s Plenum	0.18	4.57	12	20
Micro Data Center 48s Plenum	0.231	5.87	7	12
Micro Data Center 72s Plenum	0.275	6.99	5	9
Micro Data Center 144s Plenum	0.36	9.14	3	5
Trunk 12s Distribution/Loose Tube	0.18	4.57	12	20
Trunk 24s Distribution/Loose Tube	0.38	9.65	3	5
Trunk 48s Distribution/Loose Tube	0.38	9.65	3	5
Trunk 72s Distribution/Loose Tube	0.44	11.18	2	3
Trunk 144s Distribution/Loose Tube	0.69	17.53	1	1
Trunk 12s Armored - MDP	0.495	12.57	2	3
Trunk 24s Armored - MDP	0.495	12.57	2	3
Trunk 48s Armored - MDP	0.584	14.83	1	2
Trunk 72s Armored - MDP	0.594	15.09	1	2
Trunk 144s Armored - MDP	0.708	17.98	1	1
Trunk 12s Armored - All types	0.55	13.97	1	2
Trunk 24s Armored - All types	0.95	24.13	0	1
Trunk 48s Armored - All types	1.05	26.67	0	1
Trunk 72s Armored - All types	1.23	31.24	0	0
Trunk 144s Armored - All types	1.73	43.94	0	0
Generic UTP Copper Cat5e	0.185	4.70	11	19
Generic UTP Copper Cat6	0.23	5.84	7	12
Generic UTP Copper Cat6A	0.33	8.38	4	6


PK-A3188-10-00-0B Page 6 of 11




CABLE INSTALLATION

- 1) Feed incoming cable(s) through the grommet opening.
- 2) Optional Install Universal Trunk Clamp kit and secure cable to clamp.
- 3) Remove required outer cable jacket leaving jacket at the closest lance point.
- 4) Secure the cable to the lance point with Velcro or nylon tie wraps as appropriate.
- 5) If applicable, secure aramid yarn to lance point.
- 6) When using Armored cable, secure the ground wire from the armored cable to the provided grounding lug or ground by other code compliant methods to the provided grounding stud.
- 7) Using the cable management saddles, route the breakout fiber legs to the patching or termination point as shown in the configuration drawings below: (Figures 4 to 11)

ROUTING FOR FIELD AND PRE-TERMINATED TERMINATION – (SMALL/MEDIUM ENCLOSURES)

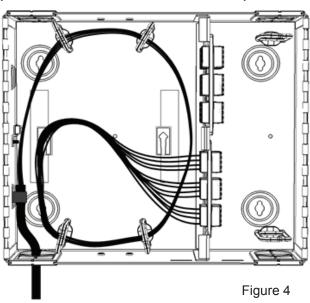


ROUTING FOR FIELD TERMINATED CABLING - SPLICE MODULES

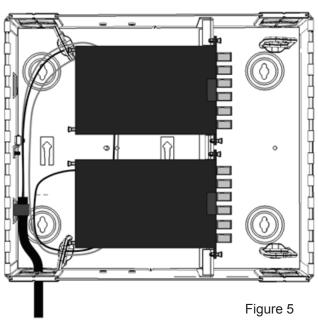


Page 7 of 11 PK-A3188-10-00-0B



ROUTING FOR PRE-TERMINATED CABLING – CASSETTES

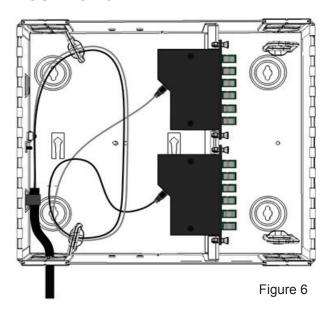

ROUTING FOR FIELD TERMINATED CABLING - FAN OUT

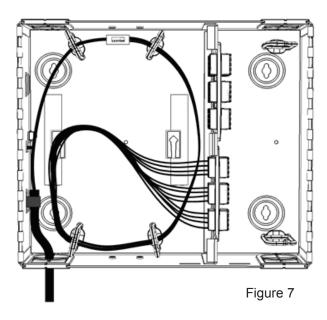


ROUTING FOR SPLICE TERMINATION

When performing splice terminations, it is recommended to pre-route and mark trunk and pigtail cabling prior to performing any trimming, termination or routing. Splice work can then be performed outside of the enclosure at the termination equipment. When routing terminated assemblies, route in the trunk cabling (solid line in Figure 8) first, followed by the pigtail assemblies (dotted line in Figure 8). To maintain future accessibility, keep each set of cabling (trunk and pigtail respectively) routed separately through the Wire Management saddles.

PK-A3188-10-00-0B Page 8 of 11



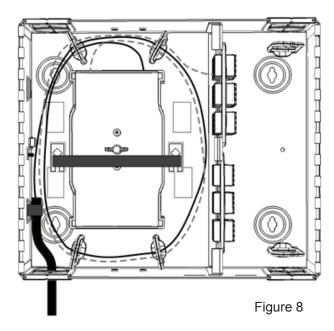

The Splice Tray Mounting Hardware Kit (SPLMT-HKT) is required for securing Splice trays to all Opt-X wall mount enclosures. Upon completion of splicing and routing, secure the splice trays to the enclosure base using the arrow lance points, appropriate threaded stud and wing nut from the Splice hardware kit.

SECURING THE SPLICE TRAYS

Securing the splice trays requires two components:

- · Splice Tray Mounting Kit including appropriate threaded stud and wing nut
- Velcro strip (bulk Velcro or Velcro supplied in the Splice Tray Mounting Kit)
- 1. Prior to mounting the enclosure, install appropriate #10-32 threaded bolt from the rear of the enclosure base and secure trays with wing nut.
- 2. Insert Velcro strip under the first arrow lance point with the hook side facing up (Figure 9).

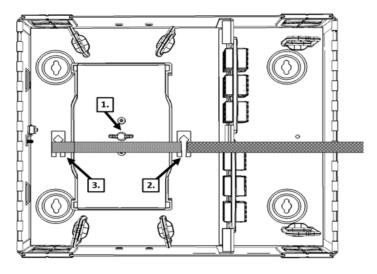


Figure 9

- 3. Place the Velcro under and around the second lance point
- 4. Fold the end over the splice tray(s). (Figure 10).

Page 9 of 11 PK-A3188-10-00-0B



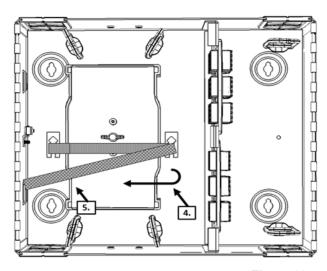


Figure 10

- 5. Create a snug mating of the Velcro to the trays. (Figure 11).
- 6. Trim excess Velcro as necessary.

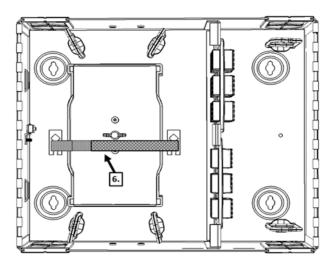


Figure 11

OPTIONAL LOCK KIT

A lock can be installed on the service door, patch door or both doors of each enclosure as required. If using the optional Lock kit #5L000-KAL


Small and Medium

- 1. Remove the plastic lock blank
- 2. Remove the CAM from the lock set
- 3. Insert the lock set into the Enclosure door
- 4. Re-install the lock CAM



LABELING

A Port Identification Label is provided with each Wall Mount Enclosure. The label(s) should be affixed to the inside of the patch bay door. Labeling within the slot position cells can be achieved with printed labels or via excel based spreadsheets available via download at www.leviton.com.

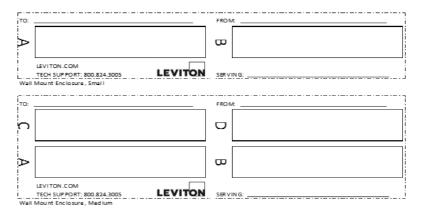

Affix labels as shown in the following Labeling Configuration matrix

Label Printing Organization by Fiber Adapter Type Vertical Orientation								
Adapter	Duplex SC (3 pack)	Duplex (6 pack		Duplex LC (6 pack)	Quad L (6 pack		ST/FC (6 pack)	ST/FC (8 pack)
No. of Ports	6	12		12	24		6	8
	Number Scheme							
	1			1-2	1-2	5-6	1	1
	2	1-2	3-4	3-4	3-4	7-8	2	2 3
	3	5-6	7-8	5-6	9-10 11-12		3	4
	4	5-6		7-8			4	5
	5	9-10	11-12	9-10	17-18	21-22	5	6 7
	6	9-10	11-12	11-12	19-20	23-24	6	8

NOTE: Ensure that the label surface area is clean of dirt, oil, and debris. Recommend use of isopropyl alcohol or a simple soap and water solution when wiping down surface area.

UNIVERSAL LABELING DEVICES

Vertical orientation

- Use 3/8" or 3/4" label tape, depending on adapter plate
- Total label length = 2 3/4"
- Panel section is 3/4" W x 2 3/4" H
 Panel section is 3/4" H x 4" L

Horizontal orientation

- Use 3/8" or 3/4" label tape, depending on adapter plate
- Total label length = 4"

Page 11 of 11 PK-A3188-10-00-0B

ARTWORK PRINT SPECIFICATIONS



PART NUMBER	PK-A3188-10-00-0B	REVDESCR	Instruction Sheet	
SPECIFICATION	S :			
*Finish: :		*Color(s): 1 over	Spot 1:	
MANUAL INTER	IORS / BINDERY / FOL	D SCHEME :		
Thickness:	Fold Saddle Stitch Drill Trim	Color(s):over _ 1: 2: 3: 4:	1:	
PROCESS:		FOLD SCHE	ME / BINDERY DIAGRAM	
Angle:	ехо	Part N	lo. Fold Line ● Punch/Drill Ho	ole
COMMENTS:				
with the understanding that accepts confidence, and (2) not to disclose,	ance or review by the recipient constitues an unde duplicate, copy, modify or use the information for	ON MANUFACTURING COMPANY, INC. It is disclosed the security of the recipient. (1) to hold this information any purpose other than that for which disclosed.	osed © 2010 Leviton in strict © 2010 Leviton Unpublished, All R	
FOR LEVITON U	SE UNLY	_	_	
Approvals: Plar	g	CQA Eng Other	PM S & A Other	
PN-ARN:		ECO Number:	Pilot Rev:	
Artist:			Artwork Release Date:	